

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Magnetic Clutch and Lock Sensor	90980-10942	D 3	Diode (Door Courtesy)	90980-10962
A 2	ABS Speed Sensor Rear LH	90980-11002	D 4	Diode (DRL)	
A 3	ABS Speed Sensor Rear RH		D 5	Door Lock Control SW	90980-10964
A 4	A/C SW	90980-11911	D 6	Door Courtesy SW LH	90980-10871
A 5	A/C Thermistor	90980-11918	D 7	Door Courtesy SW RH	
A 6	ABS ECU	90980-11424	D 8	Door Lock Motor, Door Key Lock and Unlock SW and Door Unlock Detection SW LH	90980-11858
A 7	ABS ECU	90980-11390		D 9	
A 8	Airbag Squib (Passenger's Airbag Assembly)	90980-11886	E 1	Engine Coolant Temp. Sensor	90980-10737
A 9	Airbag Squib (Steering Wheel Pad)		E 2	Engine Control Module	90980-11638
A10	A/C Condenser Fan Motor	90980-11410	E 3	Engine Control Module	90980-11637
A11	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	E 4	Engine Control Module	90980-11476
A12	ABS Actuator	90980-10891	E 5	Engine Control Module	90980-11421
A13	ABS Actuator	90980-11413	F 1	Front Airbag Sensor LH	90980-11856
A14	ABS Speed Sensor Front LH	90980-11003	F 2	Front Airbag Sensor RH	
A15	ABS Speed Sensor Front RH	90980-11074	F 3	Front Door Speaker LH	90980-10935
A16	Auto Antenna Motor	90980-11003	F 4	Front Door Speaker RH	
A17	Auto Antenna Relay	90980-10779	F 5	Front Parking Light LH	90980-11162
B 1	Back-Up Light SW	90980-11051	F 6	Front Parking Light RH	
B 2	Blower Motor	90980-10214	F 7	Front Side Marker Light LH	90980-11074
B 3	Blower Resistor	90980-10171	F 8	Front Side Marker Light RH	
B 4	Blower SW	90980-10877	F 9	Front Turn Signal Light LH	90980-11019
B 5	Body ECU	90980-11877	F10	Front Turn Signal Light RH	
B 6	Body ECU	90980-10819	F11	Front Wiper Motor	90980-11599
B 7	Buckle SW and Tension Reducer LH	90980-10795	F12	Fuel Pump and Fuel Sender	90980-11077
B 8	Buckle SW RH and Seat Belt Warning Occupant Detection Sensor	90980-10860	G 1	Generator	90980-11349
B 9	Brake Fluid Level Warning SW	90980-11207	G 2	Generator	90980-09200
C 1	Camshaft Position Sensor	90980-10947	H 1	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-11028
C 2	Camshaft Timing Oil Control Valve	90980-11162	H 2	Heated Oxygen Sensor (Bank 1 Sensor 2)	
C 3	Crankshaft Position Sensor	90980-10947	H 3	Heated Oxygen Sensor (Bank 2 Sensor 1)	
C 4	Center Airbag Sensor Assembly	90980-11869	H 4	High Mounted Stop Light	90980-11002
C 5	Center Airbag Sensor Assembly	90980-11872	H 5	Hazard SW	90980-10801
C 6	Center Airbag Sensor Assembly	90980-11867	H 6	Headlight LH	90980-11314
C 7	Cigarette Light	90980-10760	H 7	Headlight RH	
C 8	Clock	90980-11013	H 8	Horn LH	90980-10619
C 9	Clutch Start SW	90980-10825	H 9	Horn RH	
C10	Combination Meter	90980-11915	I 1	Idle Air Control Valve	90980-11145
C11	Combination Meter	90980-11913	I 2	Ignition Coil and Igniter No.1	90980-11885
C12	Combination Meter	90980-11923	I 3	Ignition Coil and Igniter No.2	
C13	Combination SW	90980-11986	I 4	Ignition Coil and Igniter No.3	
C14	Combination SW	90980-11672	I 5	Ignition Coil and Igniter No.4	
C15	Combination SW	90980-11594			
D 1	Data Link Connector 3	90980-11665			
D 2	Daytime Running Light Relay	90980-12034			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
I 6	Injector No.1	90980-11875	R 3	Radio and Player	90980-10997
I 7	Injector No.2		R 4	Radio and Player	90980-10996
I 8	Injector No.3		R 5	Rear Window Defogger Relay	82660-20340
I 9	Injector No.4		R 6	Rheostat	90980-11165
I10	Ignition SW	90980-11778	R 7	Remote Control Mirror SW	90980-11657
I11	Interior Light	90980-11724	R 8	Radiator Fan Motor	90980-10928
J 1	Junction Connector	90980-11398	R 9	Rear Window Defogger	90980-10825
J 2	Junction Connector	90980-11529	R10	Remote Control Mirror LH	90980-10907
J 3	Junction Connector	90980-11661	R11	Remote Control Mirror RH	
J 4	Junction Connector		S 1	Starter	90980-09506
J 5	Junction Connector	90980-11542	S 2	Starter	90980-11400
J 6	Junction Connector	90980-11398	S 3	Short Connector (SRS No.1)	90980-11023
K 1	Knock Sensor	90980-11166	S 4	Short Connector (SRS No.1)	90980-11904
L 1	License Plate Light LH	90980-11002	S 5	Short Connector (SRS No.2)	90980-10871
L 2	License Plate Light RH		S 6	Short Connector (SRS No.2)	90980-10870
M 1	Mass Air Flow Meter	90980-11317	S 7	Stop Light SW	90980-11118
N 1	Noise Filter (Ignition)	90980-10843	S 8	Short Connector (Rear Window Defogger)	90980-10915
N 2	Noise Filter (Rear Window Defogger)	90980-10825	S 9	Short Connector (Rear Window Defogger)	90980-10916
O 1	Oil Pressure SW	90980-11363	T 1	Throttle Position Sensor	90980-11261
P 1	Parking Brake SW	90980-10871	T 2	Transponder Key Amplifier	90980-11909
P 2	Passenger Airbag Manual ON/OFF SW	90980-11013	T 3	Turn Signal Flasher Relay	90980-10704
P 3	Passenger Airbag Manual ON/OFF SW	90980-12017	T 4	Tension Reducer Solenoid LH	90980-11369
P 4	Power Window Control SW LH	90980-10797	T 5	Tweeter LH	90980-10916
P 5	Power Window Control SW RH	90980-10789	T 6	Tweeter RH	
P 6	Power Steering ECU	90980-12068	U 1	Unlock Warning SW	90980-10860
P 7	Power Steering ECU	90980-10897	V 1	VSV (Canister Closed Valve)	90980-11162
P 8	Power Steering ECU	90980-10942	V 2	VSV (EVAP)	90980-11156
P 9	Power Window Motor LH	90980-10860	V 3	Vapor Pressure Sensor	90980-11143
P10	Power Window Motor RH		V 4	VSV(Pressure Switching Valve)	90980-11156
P11	Pretensioner LH	90980-11862	W 1	Window Lock SW	90980-10997
P12	Pretensioner RH		W 2	Washer Motor	90980-10981
R 1	Rear Combination Light LH	90980-10988			
R 2	Rear Combination Light RH				