



# J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

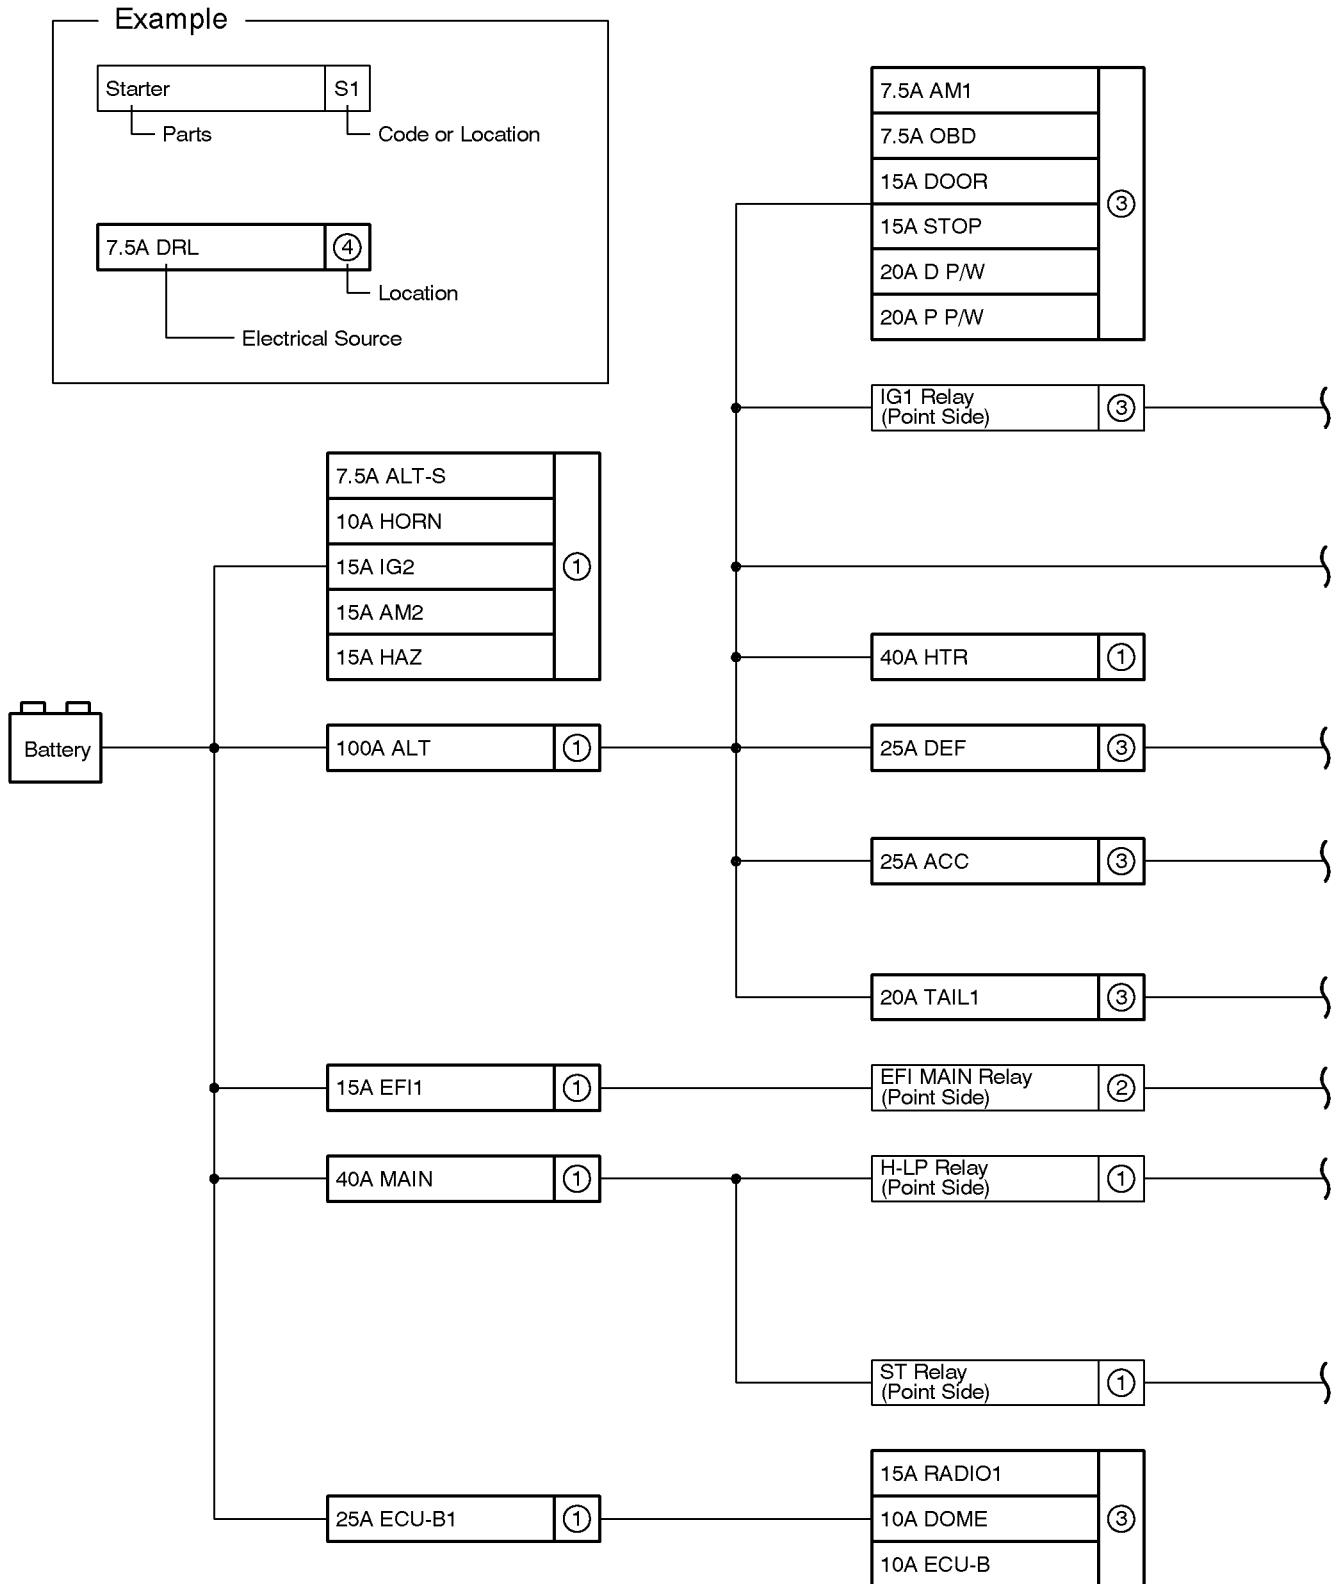

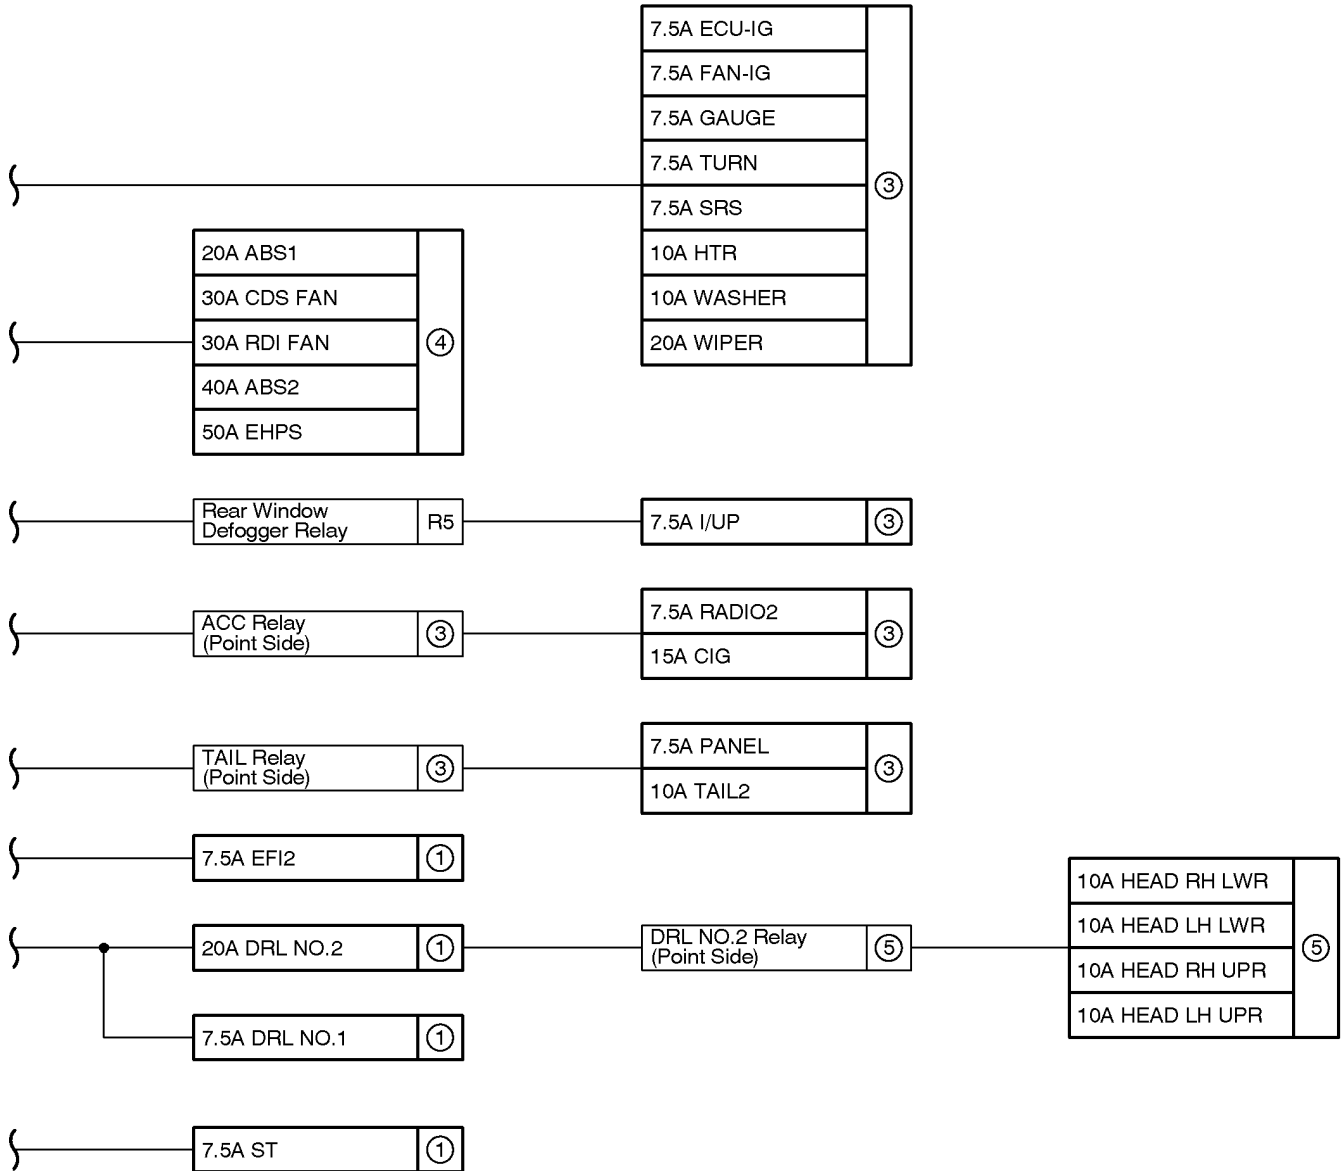

- [LOCATION]
- ① : Fusible Link Block (See page 22)
  - ② : Engine Room R/B (See page 23)
  - ③ : R/B No.3 (See page 24)
  - ④ : R/B No.4 (See page 25)
  - ⑤ : R/B No.5 (See page 28)

## J POWER SOURCE (Current Flow Chart)

### Fusible Link Block (See Page 22)

Fuse		System	Page
7.5A	ALT-S	Charging	54
7.5A	DRL NO.1	Headlight	68
7.5A	EFI2	Engine Control	56
7.5A	ST	Engine Control	56
		Starting and Ignition	50
10A	HORN	Horn	88
15A	AM2	Combination Meter	124
		Engine Control	56
		SRS	111
		Starting and Ignition	50
15A	EFI1	Engine Control	56
		Engine Immobiliser System	66
15A	HAZ	Turn Signal and Hazard Warning Light	78
15A	IG2	Engine Control	56
		Starting and Ignition	50
20A	DRL NO.2	Headlight	68
40A	HTR	Air Conditioning	130
40A	MAIN	Engine Control	56
		Headlight	68
		Starting and Ignition	50
100A	ALT	Charging	54

### R/B No.3 (See Page 24)

Fuse		System	Page
7.5A	ECU-IG	ABS	118
		EHPS	116
7.5A	FAN-IG	Radiator Fan and Condenser Fan	128
7.5A	GAUGE	ABS	118
		Auto Antenna	108
		Back-Up Light	82
		Charging	54
		Combination Meter	124
		Door Lock Control	100
		EHPS	116
		Engine Control	56
		Headlight	68
		Light Reminder and Key Reminder Buzzer	94
		Power Window	98
		Rear Window Defogger	122
		Seat Belt Warning and Electric Tension Reducer	96
7.5A	I/UP	SRS	111
		Combination Meter	124

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	OBD	Engine Control	56
7.5A	PANEL	Cigarette Lighter and Clock Illumination	86 76
7.5A	RADIO2	Auto Antenna Cigarette Lighter and Clock Combination Meter Radio and Player Remote Control Mirror	108 86 124 106 104
7.5A	SRS	SRS	111
7.5A	TURN	Turn Signal and Hazard Warning Light	78
10A	DOME	Cigarette Lighter and Clock Combination Meter Interior Light	86 124 84
10A	ECU-B	Combination Meter Headlight Interior Light Light Reminder and Key Reminder Buzzer Seat Belt Warning and Electric Tension Reducer	124 68 84 94 96
10A	HTR	Air Conditioning	130
10A	TAIL2	Taillight	72
10A	WASHER	Wiper and Washer	90
15A	CIG	Cigarette Lighter and Clock	86
15A	DOOR	Door Lock Control Light Reminder and Key Reminder Buzzer	100 94
15A	RADIO1	Auto Antenna Radio and Player	108 106
15A	STOP	ABS Engine Control Stop Light	118 56 80
20A	D P/W	Power Window	98
20A	P P/W	Power Window	98
20A	TAIL1	Illumination Light Reminder and Key Reminder Buzzer Taillight	76 94 72
20A	WIPER	Wiper and Washer	90
25A	DEF	Rear Window Defogger	122

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

---

### R/B No.4 (See Page 25)

Fuse		System	Page
20A	ABS1	ABS	118
30A	CDS FAN	Radiator Fan and Condenser Fan	128
30A	RDI FAN	Radiator Fan and Condenser Fan	128
40A	ABS2	ABS	118
50A	EHPS	EHPS	116

### R/B No.5 (See Page 28)

Fuse		System	Page
10A	HEAD LH LWR	Headlight	68
10A	HEAD LH UPR	Headlight	68
10A	HEAD RH LWR	Headlight	68
10A	HEAD RH UPR	Headlight	68

\* These are the page numbers of the first page on which the related system is shown.

