


FRONT FOG LIGHT

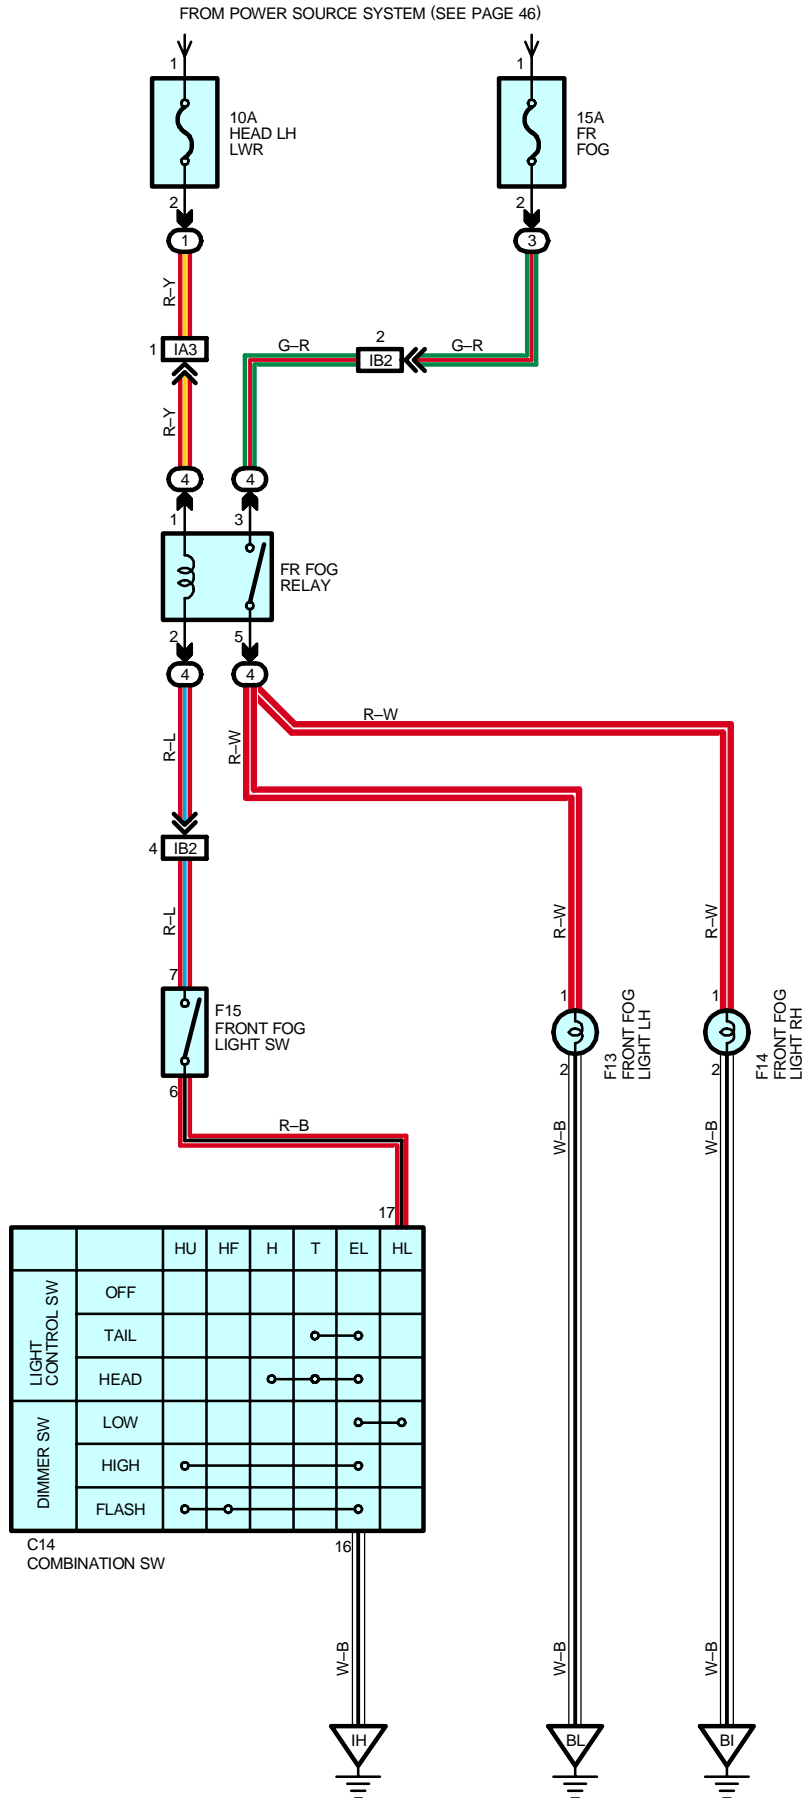

SERVICE HINTS

FR FOG RELAY

3-5 : Closed with the light control SW at **HEAD** position, the dimmer SW at **LOW** position and the front fog light SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C14	32	F14	34		
F13	34	F15	33		

□ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
3	24	R/B No.3 (Left Side of Instrument Panel)
4	25	R/B No.4 (Front Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	38	Engine Room Main Wire and Luggage Room Wire (Left Kick Panel)
IB2	38	Luggage Room Wire and Instrument Panel Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IH	38	Right Kick Panel
BI	42	Suspension Tower Front RH
BL	42	Suspension Tower Front LH