


INSPECTION

1. INSPECT FOG LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|----------------------|-------------------|---------------------|
| OFF | – | No continuity |
| ON | 6 – 7 | Continuity |
| Illumination circuit | 2 – 3 | Continuity |

If the continuity is not as specified, replace the switch.

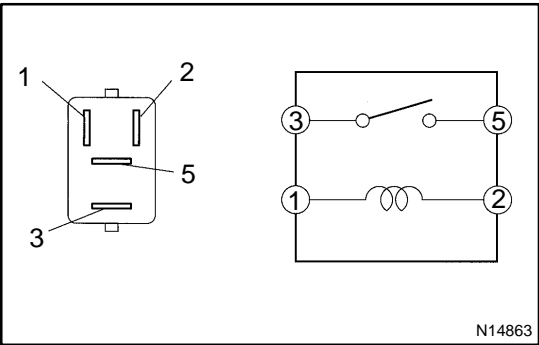

2. INSPECT FOG LIGHT RELAY (Marking: FOG) CONTINUITY

| Condition | Tester connection | Specified condition |
|------------------------------------|-------------------|---------------------|
| Constant | 1 – 2 | Continuity |
| Apply B+ between terminals 1 and 2 | 3 – 5 | Continuity |

If the continuity is not as specified, replace the relay.