



SERVICE HINTS

I11 INTERIOR LIGHT

2-GROUND : Always approx. 12 volts

D6 DOOR COURTESY SW LH

1-GROUND : Closed with the driver's door open

D7 DOOR COURTESY SW RH

1-GROUND : Closed with the passenger's door open

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code		See Page
C10	A	32	D6	34	J3	A	33
C11	B	32	D7	34	J4	B	33
D3		32	I11	35			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	40	Floor Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Left Kick Panel
IH	38	Right Kick Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	40	Instrument Panel Wire			